


Bird House

DIY Bird House Guide

Easy-to-Build with Step-by-Step Illustrations

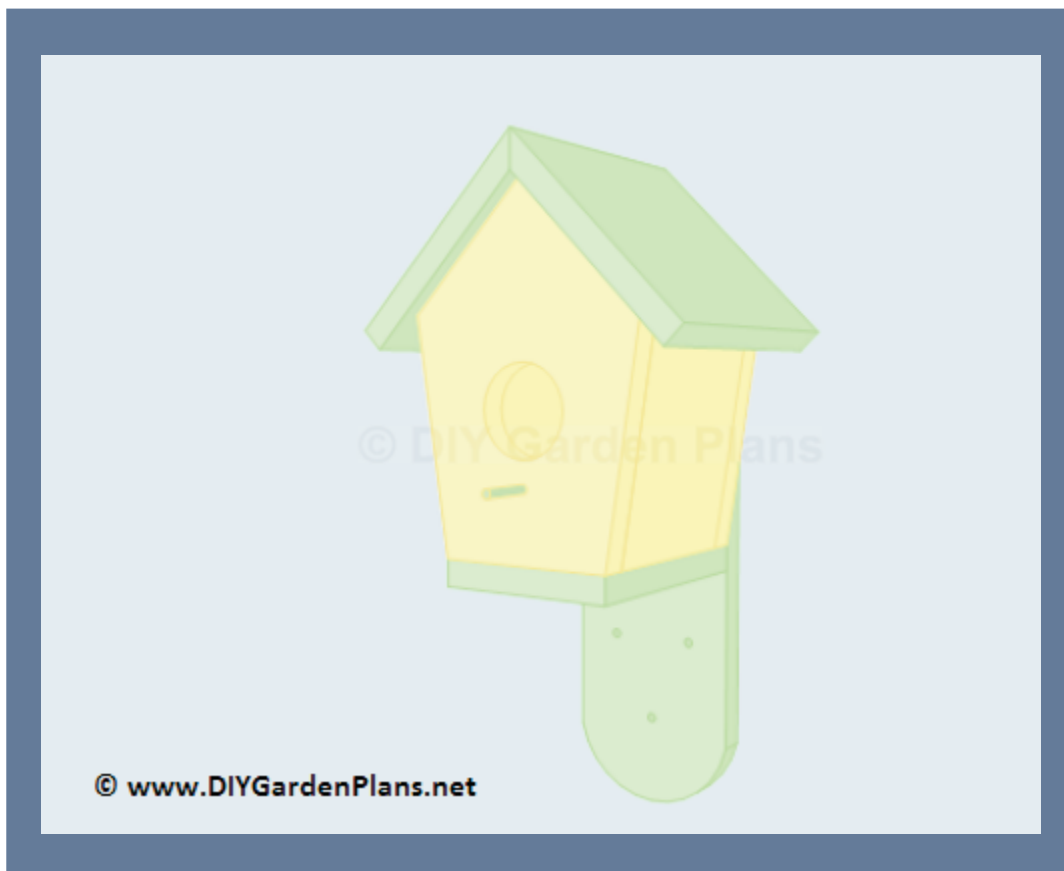

Legal

The contents of this guide may not be sold, modified or distributed in anyway without the expressed written consent of the publisher. Reprinting, copying, or any form of distribution for commercial or non-commercial purposes is strictly prohibited and will be prosecuted.

Disclaimer

Every attempt has been made to provide the most accurate information as possible. However, the publisher accepts no liability for any wrong information as result of purchasing and/or reading this guide.

You can follow this guide at your own risk, the publisher accepts no responsibility for any injury to any person.


Copyright © www.DIYGardenPlans.net

All rights reserved

ISBN-13:

ISBN-10:

Material/Cut List

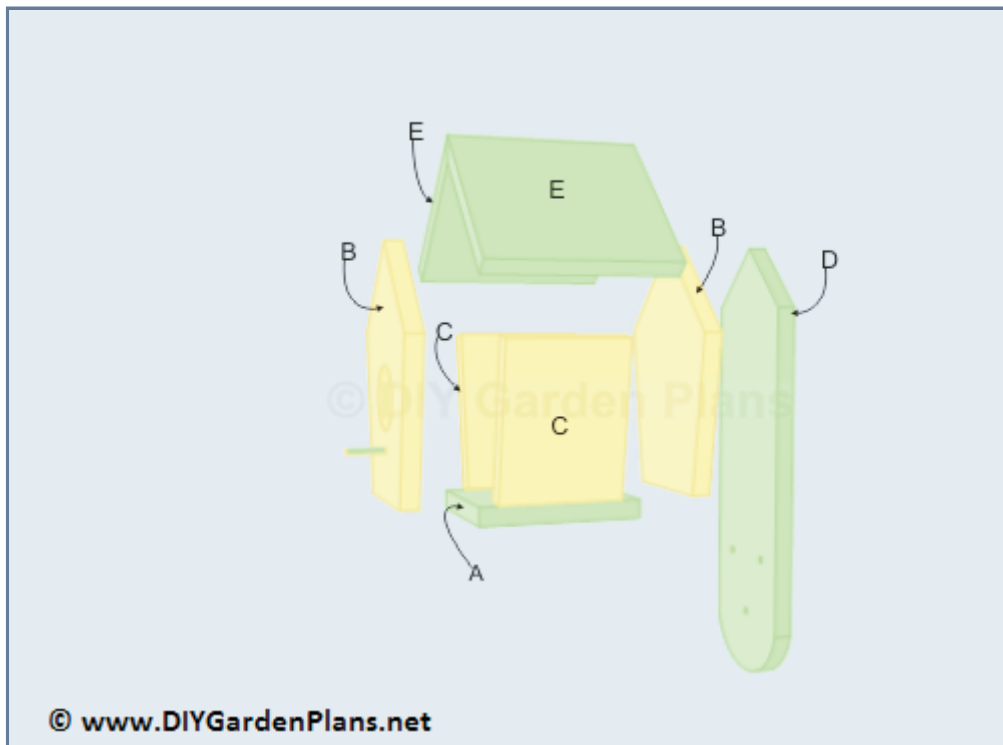

Disc.	Qty.	Size
3/4" - A- BOTTOM (cedar, pine, redwood)	1	5" x 6 1/2"
3/4" - B- FRONT/BACK (cedar, pine, redwood)	2	7" x 10"
3/4" - C- SIDES (cedar, pine, redwood)	2	5" x 6 3/8"
3/4" - D- MOUNTING BOARD (cedar, pine, redwood)	1	5" x 18"
3/4" - E- TOP (cedar, pine, redwood)	2	7" x 7 3/4"
HARDWARE		
1 1/4" finishing nails		
1 1/4" wood screws		
wood glue or construction adhesive		
1/4" dowel (optional)		
paint (optional)		

DIY Bird House Guide

To prevent the wood from cracking pre-drill holes before nailing or screwing.

Cut all the birdhouse parts as shown below. Pre-drill holes and add screws through the base (A) and into the front and back (B). These screws will be removed when the birdhouse needs to be cleaned out.


Add the sides (C), attach with 1 1/4" finishing nails, nail through the front/back (B) and into the sides (C). There will be a gap on the top of the sides (C), this will serve as a vent, the bottom will be flush with the base (A).

Attach the mounting board (D) to the back (B). Pre-drill holes and use 1 1/4" wood screws, the top of mounting board (D) will be flush with the top of the back (B).


Attach top (E) nail 1 1/4" finishing nails through the top (E) and into front/back (B). The back of the top (E) will be flush with the mounting board (D), the front and sides of the top (E) will have an overhang.

Drill out the entrance hole. The size of the entrance hole will be determined by the type of bird. Drill a 1/4" hole underneath the entrance to insert a 1/4" dowel 3" long (use wood glue or construction adhesive to secure). The dowel and paint are optional.


DIY Bird House Guide

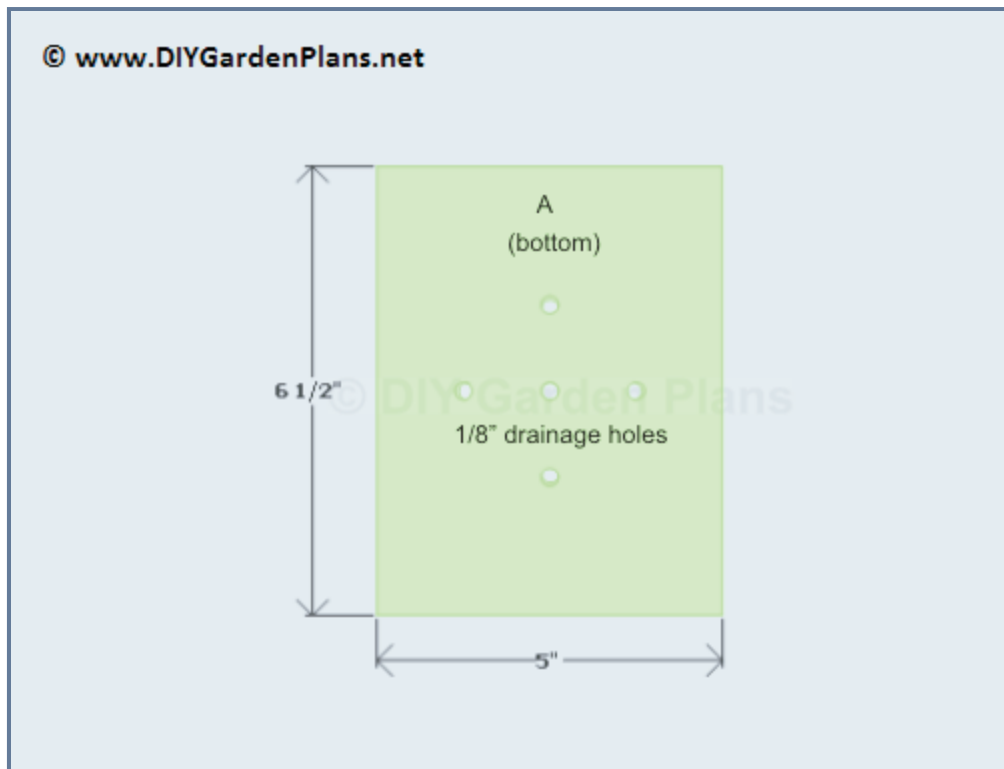


DIY Bird House Guide

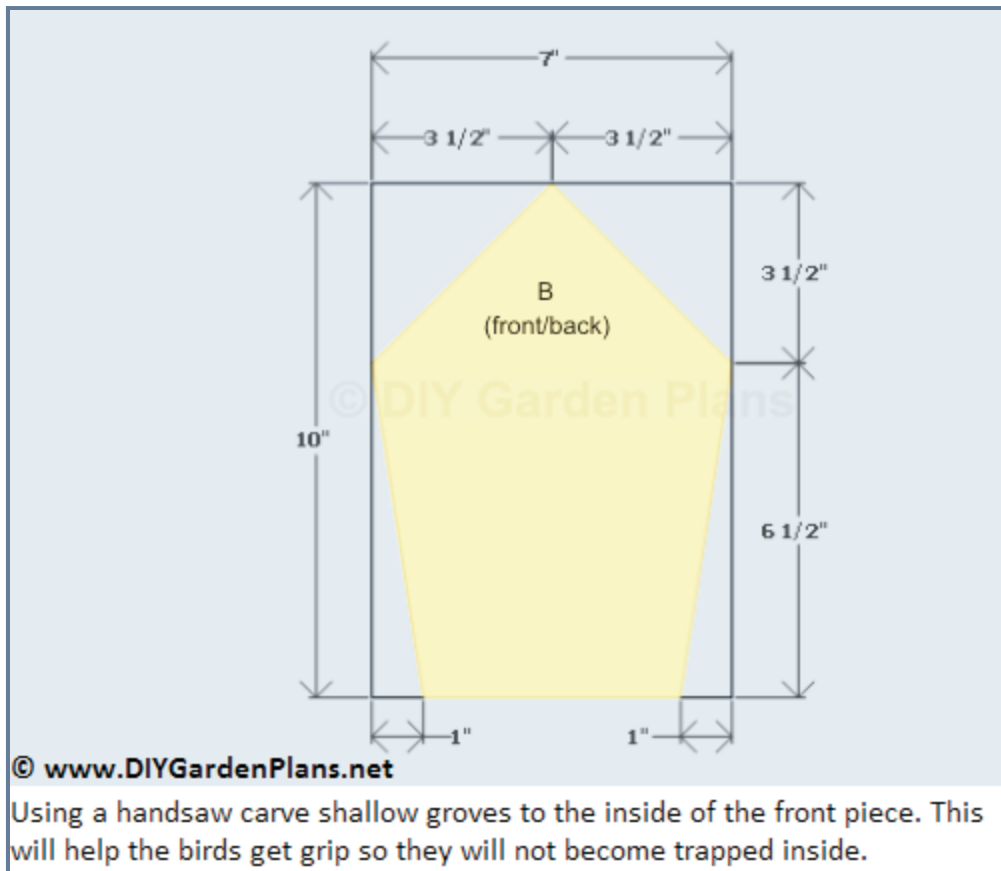

DIY Bird House Guide

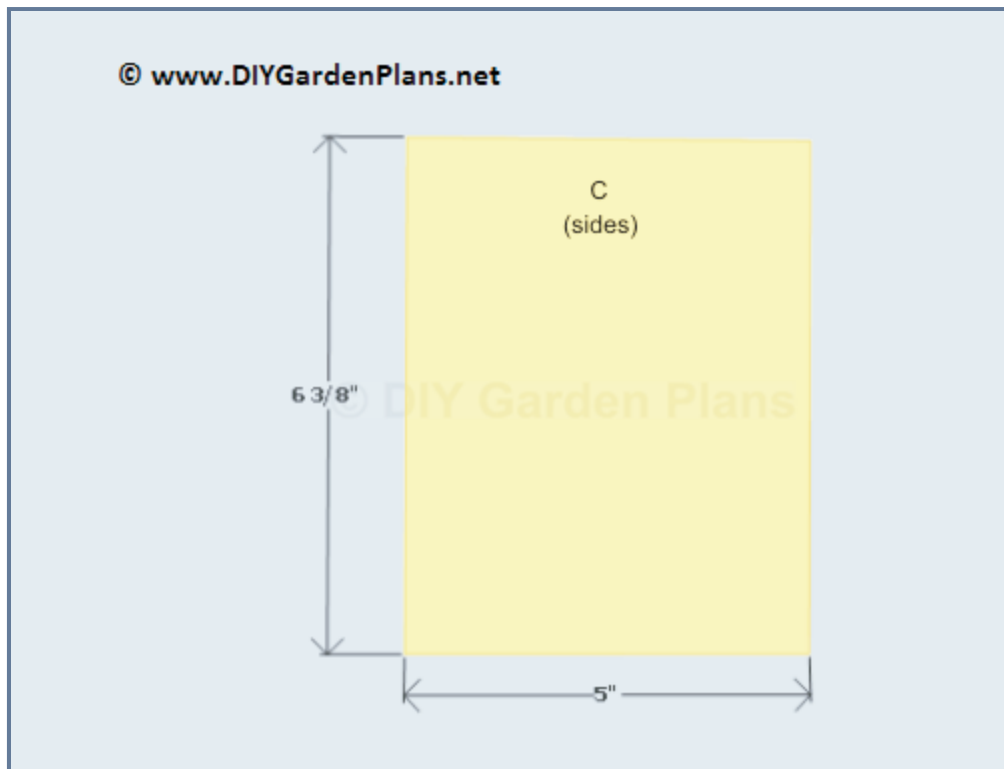

DIY Bird House Guide

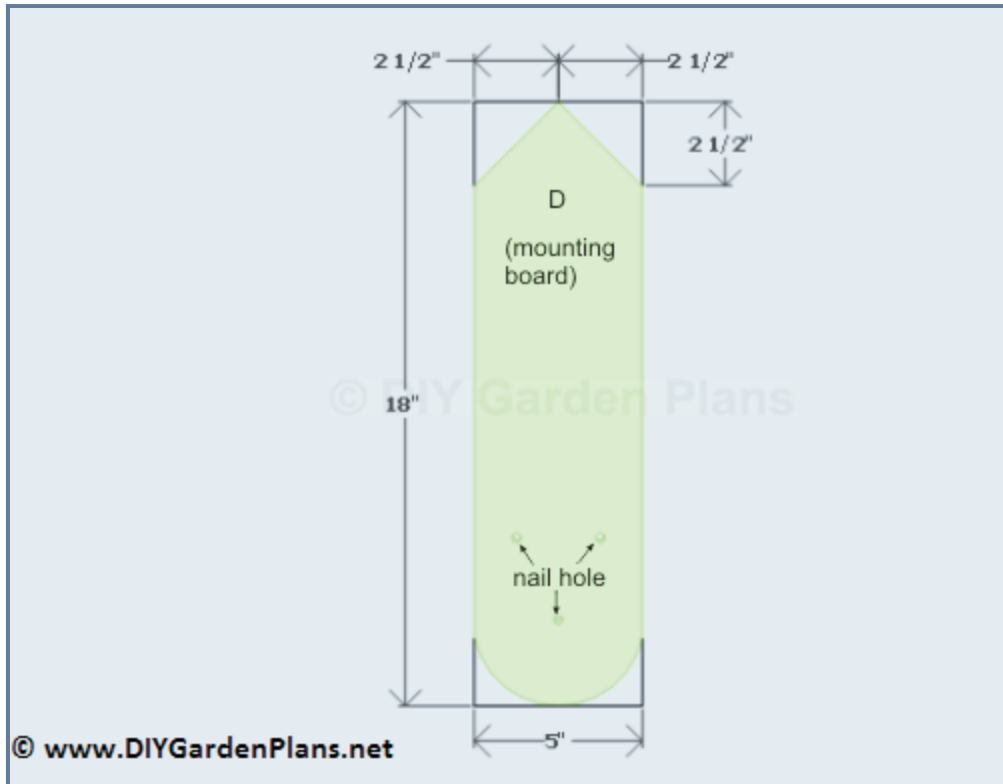

DIY Bird House Guide

